

FULISI
SANITARYWARE

INSTALLATION INSTRUCTIONS

MODEL:FL-7095

FULISI Sanitarywares Co.,Ltd

ADD: Dafengtian Industrial Park, Wuzhuang, Luocun Town, Nanhai Distrit
Foshan Municipal, Guangdong Province, .P.R.China.

TEL: 0086- 0757-86435008

FAX: 0086-0757-86435018

P.C.:528226

WESITE: [Http://www.china-fulisi.com](http://www.china-fulisi.com)

E-mail: fulisi@china-fulisi.com



KIND WARMING TO OUR RESPECTED CLIENTS

1. Please read the instructions carefully before using the product.
2. Elderly people and pregnant women should not use steam bath.
3. Children using steam bath must be accompanied by adults.
4. People under the influence of asthma, high blood ppressure or heart disease should not use steam bath.
5. Press the stop key at once if you have any uncomfortable feeling.


Water and electric diagram

1. water supply: G1/2cold-hot water pipe,height H=+800mm,penetrating the wall for the stop valve.
2. power:220V/50Hz three-wire single phase,10A capacity and above, height off the ground H=+1000MM.
3. Water discharge:water discharge hole is within an area of 500mm from the center shown in the diagram.


Note:Water discharge hole is at a position other than the center shown in the diagram.

Water and electric diagram


Model:FL-7007 single massage bathtub
Size:1500x900x730mm

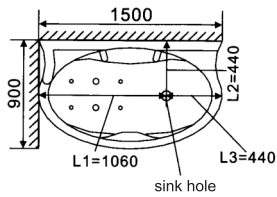

Plane picture

 

Relief picture

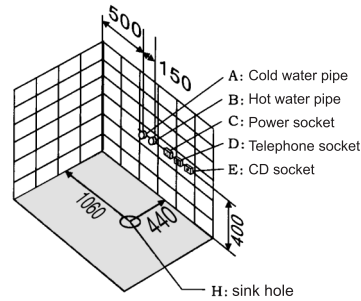

Relief installation picture

1. Levelling the tub with a leveling ruler and place it at the installing corner.See diagram 1
 2. Adjusting the foundation bolt at the bottom to enable all the bolts to touch the ground and level the tub.See diagram 2
 3. Inserting cold & hot water pipe in to the water in-let valve on the wall,make them connect.
- Product installation procedure

Product installation procedure

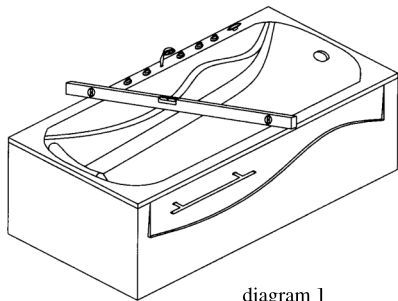


diagram 1

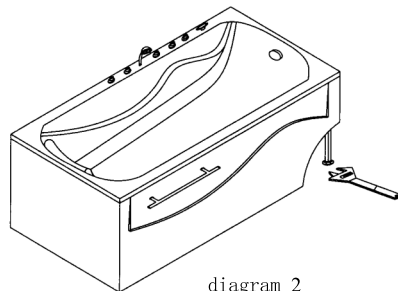


diagram 2

Usage and maintenance

- Connect the cool & hot water pipe correctly, insert the draining hose into the drainer, insert the power socket correctly.
- Place the massage bathtub in the position appressed to the wall., Seal the connective parts by silicone building sealant.
- Adjust all the function with water to check if all function are Ok

4、 Maintenance and maintain

- Daily cleaning with general liquid scour, please do not clean the bathtub with doughty acid, doughty alkali, latex , acetone and the chemical which containing methacrylic, formaldehyde, or it will make the bathtub face paled, or destroy the bathtub.
- Polish the face scar with 1000# levigation sand paper firstly, then polish with 1500# sand paper, polishing with soft cloth and toothpaste at last.
- Clean away the scale on the bathtub face with citric acid or vinegar.
- Scrape the stubborn blotch with sort cloth and toothpaste.
- After using for a long time,you can renew the bathtub with luster wax, it will make the product look likes a new one.

5、 Currently fault analyze.

Fault phenomena	Fault analyzing	Fault obviating
Water pump can not be start up	1.the air hose which connected with the air pump switch was loosened.	Connect anew correctly.
	2.air pump switch was broken.	change
	3.power plug haven't been inserted correctly or power fault.	Obviate the supply of power fault.
	4.the water pump's impeller was locked by some sundries.	Take down the water recycle net and clean away the sundries.
	5. the water pump was broken.	Change a new water pump.
surfing can not adjust	1.Surfing adjustor was broken.	Change the sealed gasket inside the adjustor .
	2.The air hose of surfing adjustor loosen,leak air or jam.	Dredge and connect anew correctly.
make water	1. sealed washer aging and broken.	Change
	2.locked nut loosened.	Belock anew.
	3.connecting parts' latex aging.	Clean way the old latex and connect with new latex.
Shake acutely	1.grounded parts of bathtub hang in the air.	Adjusting all grounded parts and make them grounded correctly.
	2.water inlet jaming	ake down the water recycle net and clean away the sundries
Water pump works but the bottom light is not light	1.bathtub bottom light short circuit	Obviating the circuitry fault
	2. bathtub bottom light is broken	Change the bathtub bottom light (forbid increasing power)
	3.transformer is broken.	Change the transformer(forbid minishing the rated power.)

1、 Safety notice item:


- Cardiopathy, hypertension and person who is unwell or after drinking, please no not use the massage bathtub to avoid risk happening.
- Children should be accompanied by the adult while using the massage bathtub.
- Power plug must be assembled with creepage protector and connected with the terra wire, and follows the rules to operate. Power socket must be install out of reach of water.
- The massage bathtub must be assembled by the careerman.
- When switch on the shower and linn faucet, please adjust the suitable water temperature firstly, to avoid scalding and destroy the products.
- Grounding devices shall be connected to a fix wiring permanently. Added disconnected device shall be installed in fixed wiring according to wiring regulation.

2、 Usage instruction:

- Switch on the linn faucet/shower switch valve, switch on the cool water adjusting valve firstly, then switch on the hot water adjusting valve, adjust the suitable water temperature and water massage bathtub(Forbid to water the temperature higher 80°C hot water directly, or it will destroy the product), await the water line reach 2CM above jets, then press the air switch to switch on the water pump (forbid to make the water pump running for a long timewithout water, or the water pump will destroy because of too high temperature), left–right surf adjuster can adjust the size of current; turn the jets to adjust single jet's current size to get the best massage impact.
- Finish using, eliminate the water in massage bathtub, then water suitable clear water, switch on the water pump to clean the massage bathtub pipeline.
- If you will not use the massage bathtub for a long time, please cut off the source and power of massage bathtub.

3、 Way of installation.

- Level the ground and wall corner, connect cool & hot water hose correctly, assemble power socket and reference the size's parameter to prepare the drain outlet .
- Place the massage bathtub in the confirmed position, adjust all he underprop to make them meeting the ground and levelling.
- Immit a spot of water in massage bathtub, turning the drainer handle, await finishing draining, there is not any water in the massage bathtub more, or should repeat the step 2, until there is no water in bathtub.

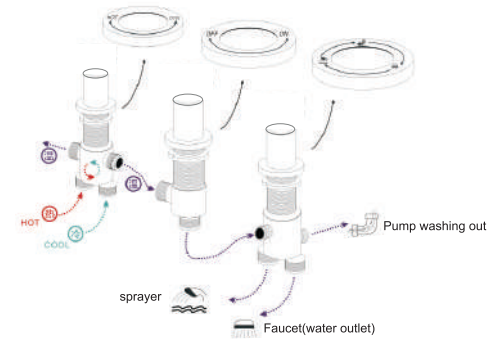


Tube cleaning system instructions:

Usually bathtub tube leave small part of water, with the outlet tube from the lowest office will drain all the left water... Tube cleaning system is adding a switch from taps to fluming clean water to other tubes to make the waste water to drainage, which can avoid recycling waste water.

Product installation procedure

1. Move the bathtub to right place, to check if the bathtub is horizontal with level ruler,if not,record the data. See diagram1.
2. Push away the bathtub from the installation place,adjust the bathtubfoot support corresponding to the bathtub surface level which is higher,(see diagram2)it is bathtub surface level,push bathtub to the installation place after adjusting,then test with level ruler,reapeatedly adjusted until the level is horizontal.

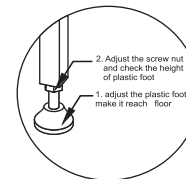

Adjust the foot

diagram 1

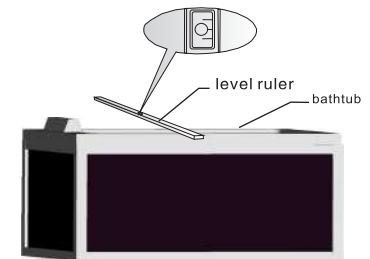


diagram 2



3. Push away the bathtub from the installation place,insert cold&hot water pipe in to the water in–let valve,insert the generator plug in the socket, then connect water discharge pipe to the outfall.
4. move the bathtub to using place.

Installation diagram of jacuzzi




Product parts


Plane picture Relief picture

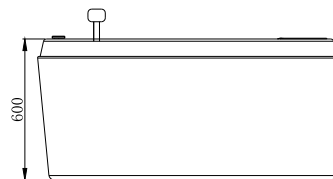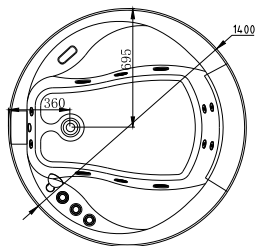

Relief installation picture

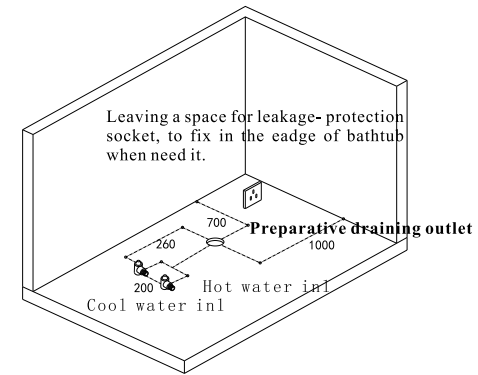

Controlling valve connecting illustration

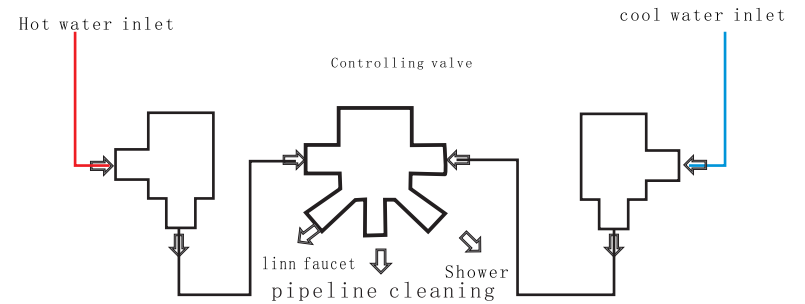

Electric blueprint

