


FS-8902 Computer Steam room arrangement plan

Picture L

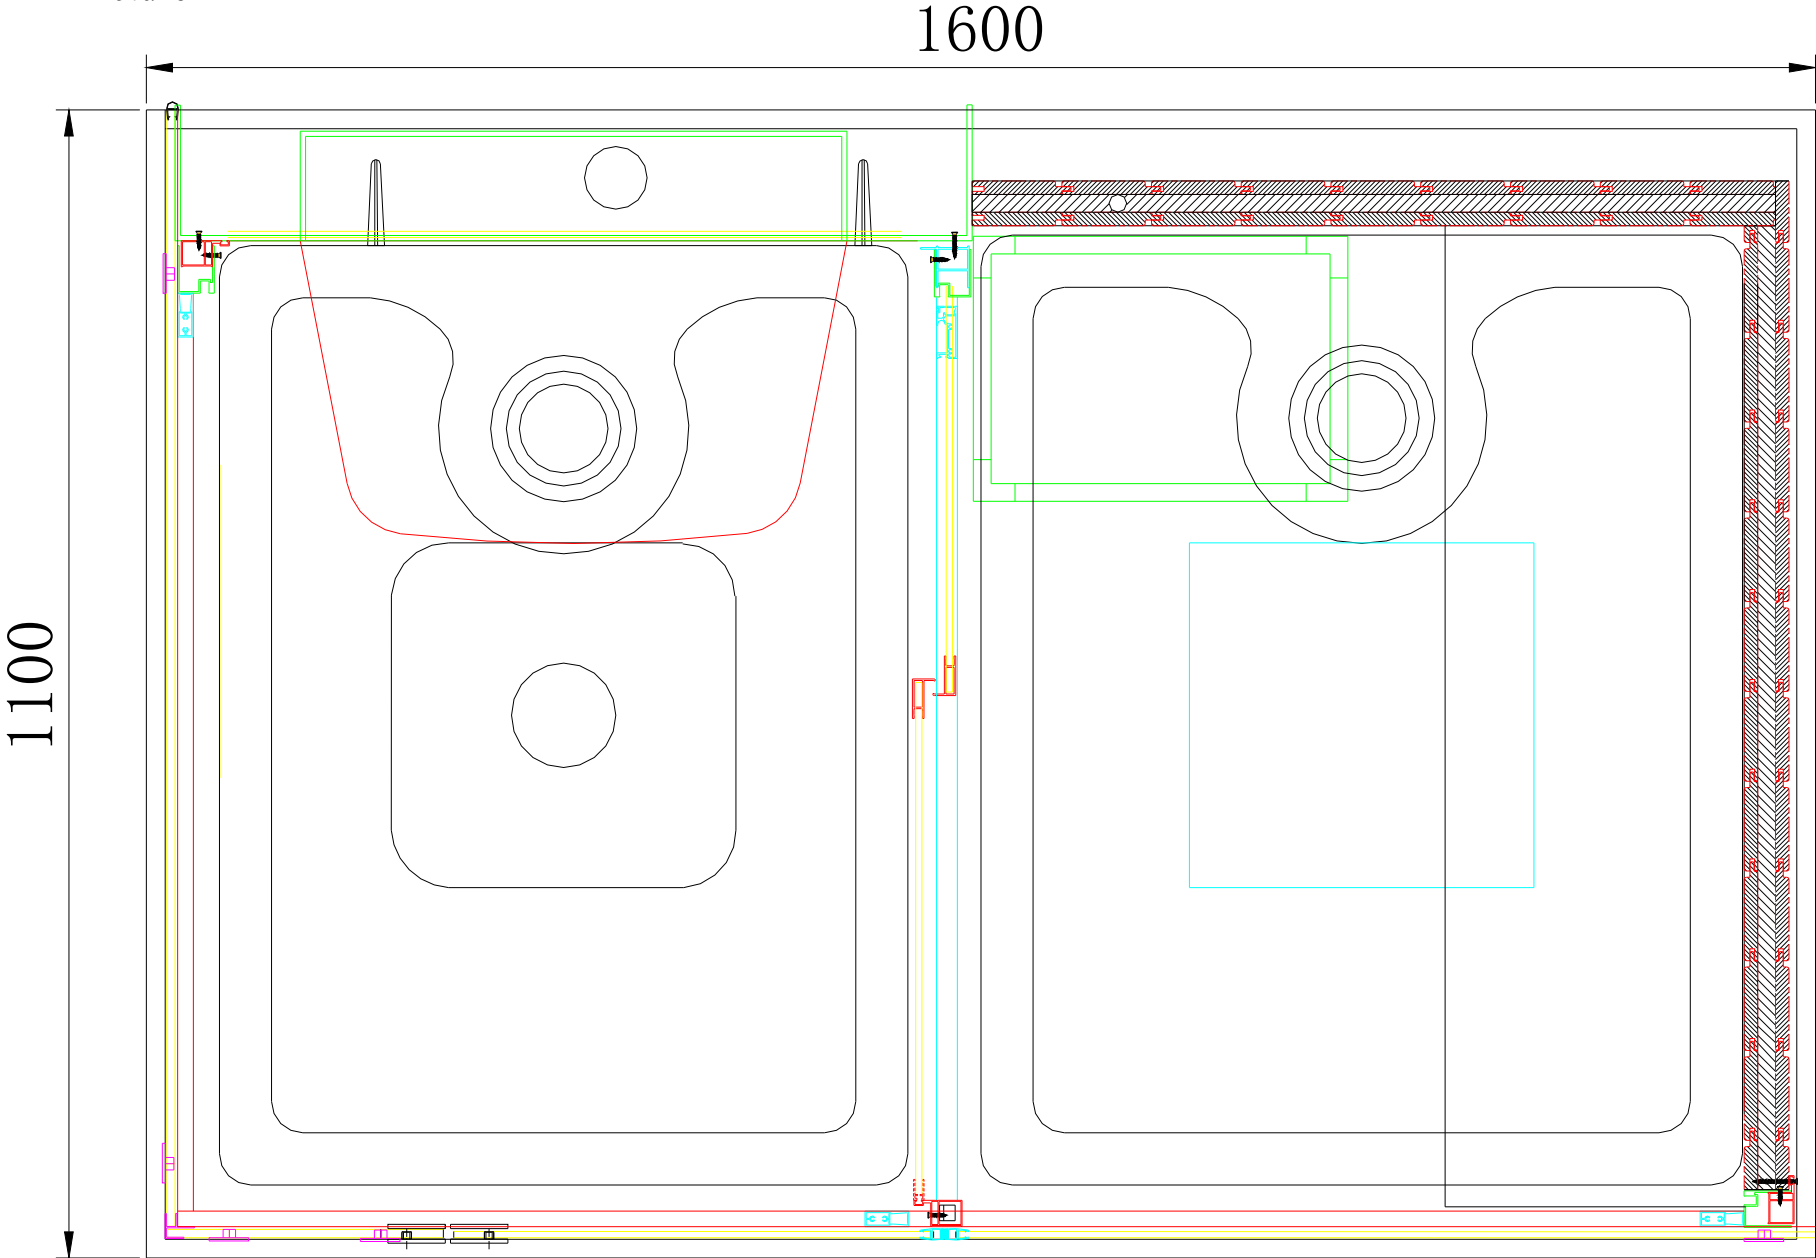



F U L I S I

Fulisi Sanitary Ware Co., Ltd.

CONTINUING PURSUIT FOR EXCELLENCE IN QUALITY
AND EXCELLENT SERVICE ENSURED BY FAITHFULNESS AND
ADVANCED SCIENCE

Enterprise Introduction

Fulisi Sanitary Ware Co., Ltd

Add: Da Feng Tian Industrial Park, Wu Zhuang, Luo Cun Town,
Nanhai, Dist, Foshan City, Guangdong, China

Tel: 0757-86435008

Fax: 0757-86435018

P.C: 528226

Http: www.china-fulisi.com

E-mail: fulisi@chin



F U L I S I

FULISI
SANITARYWARE

INSTALLATION INSTRUCTIONS


TO OUR RESPECTED CLIENTS!

1. Please read the instructions carefully before using the product.
2. Elderly people and pregnant women should not use steam bath.
3. Children using steam bath must be accompanied by adults.
4. People under the influence of asthma, high blood pressure or heart disease should not use steam bath.
5. Press the stop key if you should feel uncomfortable.

Steam room installation instruction

Please read the instruction carefully before installing.

1: Instrument

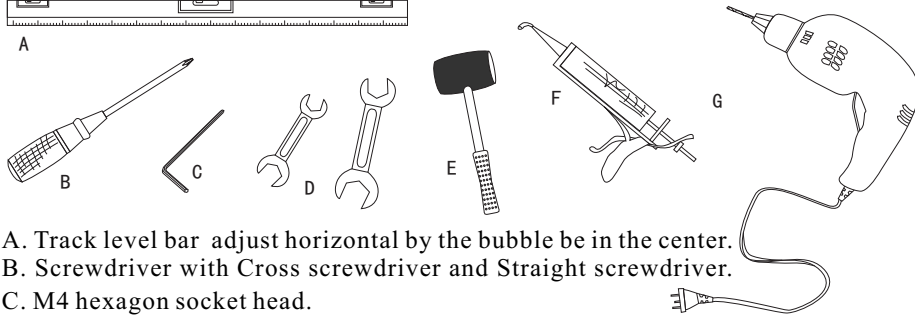

- A. Track level bar adjust horizontal by the bubble be in the center.
- B. Screwdriver with Cross screwdriver and Straight screwdriver.
- C. M4 hexagon socket head.
- D. Wrench M12 & M24.
- E. Gum hammer venire adjusts the steam house.
- F. Solid wood panel.
- G. Glass cement ---leak proof.
- H. Electric drill---with M3.6 and M8 drills.

2、 instruction preparation :


- A. Check all accessories are ready and in good condition.
- B. Preset the location of the drain hole.
- C. Preset the connector of the cold&hot water pipe on the wall according to their length.
- D. Pre-set the electric leakage protection socket on the wall according to the power wire length of electric wire on the wall. $16A > 2.5M2$ wire diameter > Determine the place of the electrical source

Need special electric circuit, and level A grounding circuit breaker incident (GFCI) or ground leakage circuit breaker (ELCB) protection. Test the breaker before installation, when press the test key on the plug, the breaker should cut off the power supply. If not, it means the ground current or the breaker is broken, when this happen, please don't use our products in order to avoid electric shock accident. Please pull out the plug and ask qualified technician to maintenance.

Safety precautions

- 1. The installation and adjustment of the product must be effected by qualified electricians or professionals dispatched by our sale agents.
- 2. The power connecting facilities must be conformity with the safety standard and with the brand and name of the half-finished products, must be provided with earth leakage protective switches and fuse against excessive current or excessive voltage and must be effective.
- 3. In order to avoid burning, please stay away from the steam outlet and the sauna stove as the steam generator and the stove are rather hot.
- 4. No valve or stoppage is allowed between the steam outlet and pipes.
- 5. In installation, no wires, cpu of controller or key board can be dismantled (There are no parts dismantle by the user in our cpu and key board) In case of violation on the part of the user, our company is not responsible for any trouble, electric leakage or shock.


advise to reserve places for telephone, plug, cold & hot water connector per below drawing:
Bathroom electric outlet

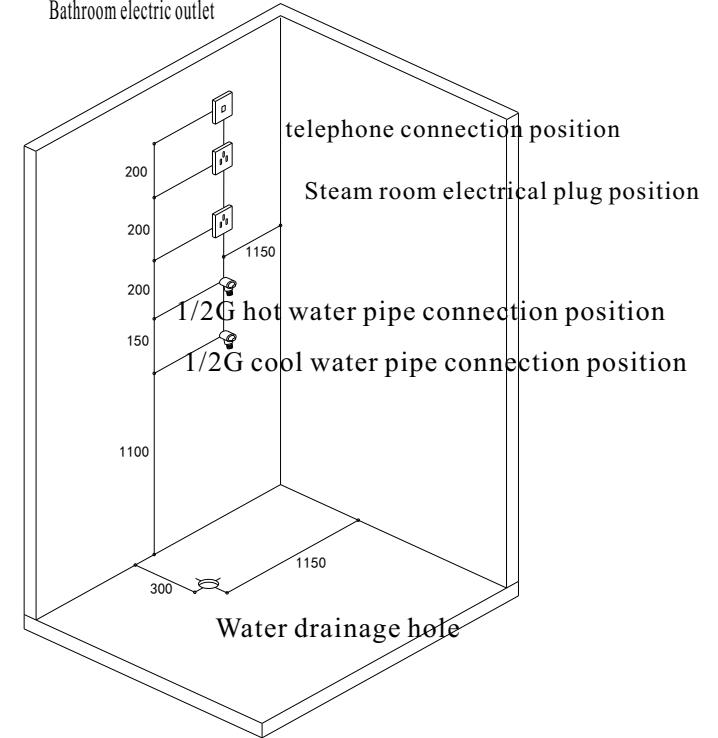


Standard voltage/current/power Second adjust screw nut for confirming the height of foot
Cable: AC110V +10V/3KW/27A
Chinese: AC220V/3KW/13.5A
USA: AC220V/3KW/13.5A
Euro: AC230V/3KW/13A
Australia: AC220V-230V/3KW/13.5
British: AC220V-230V/3KW/13.5 A
South Africa: AC230V/3KW/13A

3、 Prepare for installation and method


- A: A piece of paper or cloth cover water, sealed with tape outlet, prevent small parts fall into the bottom water; Put in the installation position, with the bottom basin level detection plane, adjust the anchor of the bottom basin level. (as picture A)
- B: Will be installed to the back of the relevant accessories placed in the bottom basin of the corresponding position, align the corresponding hole Position, with screws and nuts will be locked back and back, and then will be installed accessories.
- C: Then press the steps to install the glass door. (as picture D. E.F.G.H).

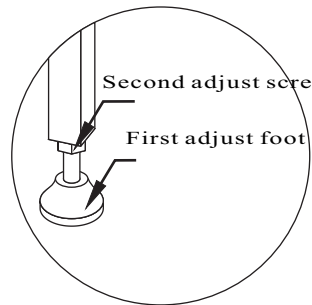


The method of adjusting foot

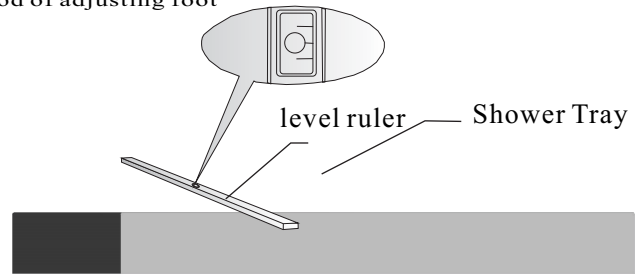

Picture A

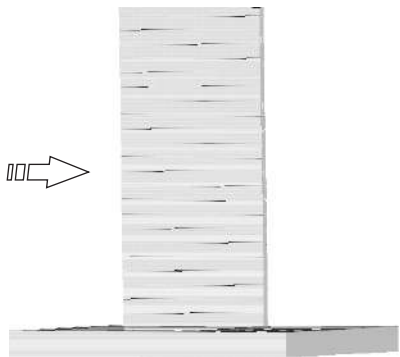

Picture B

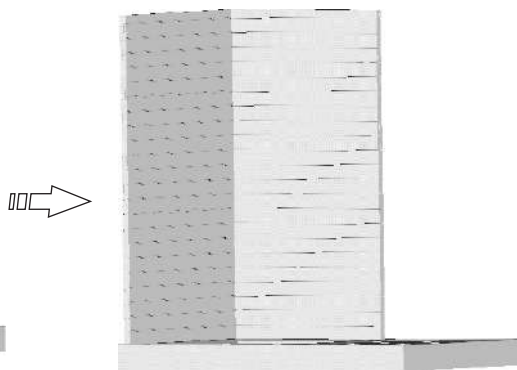

Picture C


<3>




Picture D



Picture E

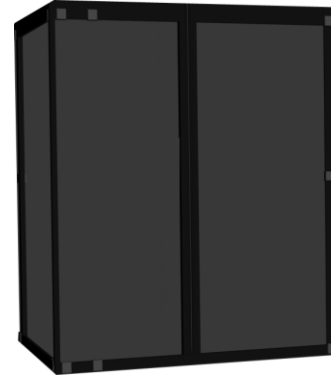

Picture F

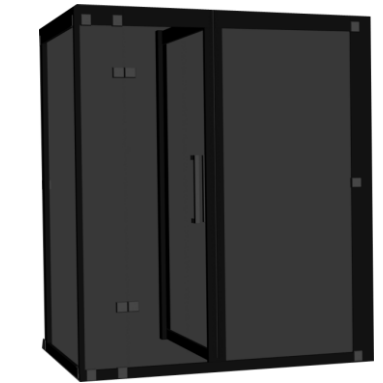

Picture G

<4>


D: install the top, make sure the holes match with each other, top and back connect with machine screw ,top and decorative panel connect with self drilling screw.(as picture H)

E: install mirror, using M4*20 self drilling screw with plastic ring fix the mirror, then put the decorative panel on it.(as picture I)

F: water-flow diagram (as pictureK)

G: checking all the positions if they meet the correct holes, install the shower handle and other accessories. (as picture C)


H: connect the hot and cool water pipe to correct position according to the mark . put the drainage pipe in to the drainage hole.(as the right picture); connect the telephone line to your home telephone socket; check all the circuit is ok and the accessories is fixed firmly. Then you can check if the machine can work normally. Last replace the steam room to the position you want.

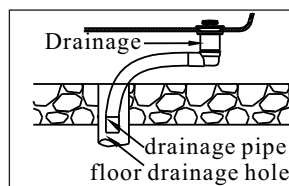

Picture I

Picture J

<7>

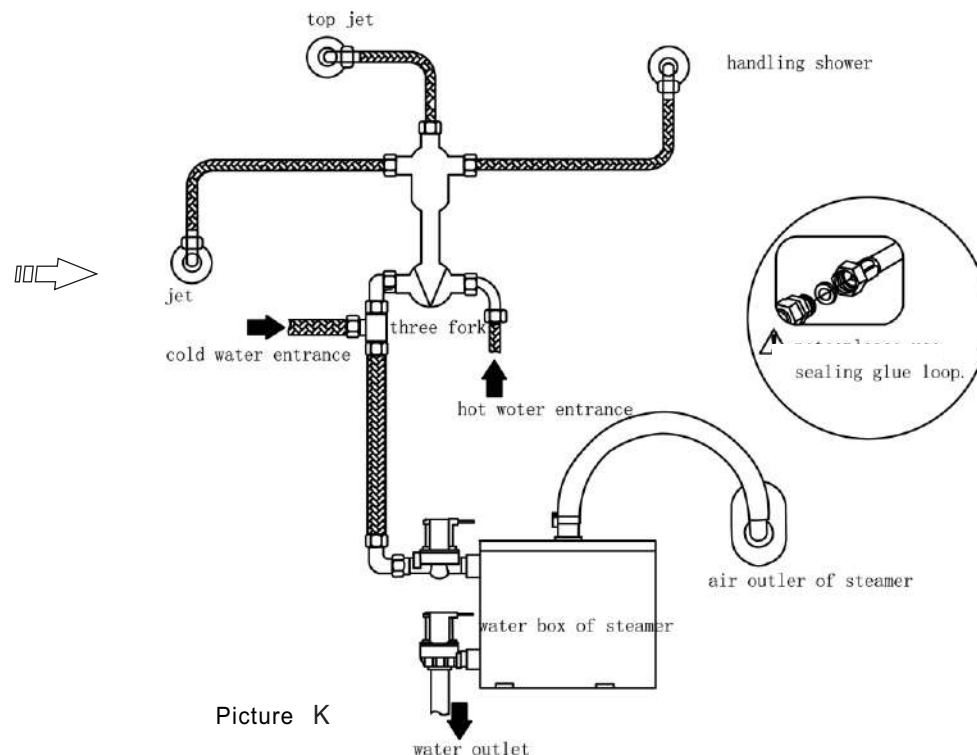

Picture K

4.Installation test

A.move the hander repeatly, check the door to see if it move soomthly, and the magnetic function automaticly.

B. Check water system working condition in case of leakage of all water pipes (if water leakage occurred, turn off the power immediately)

Check all the connecting pipe, screws holes to make sure no water leakage.

5. Attention



A.Do not put high temperature or heavy things on the steam house in case of damaging the steam house during the installation.

B.Be careful with the aluminum and glass with scratch, in case of damaging its outlooking.

C.To make sure everything perfect, please set two side glue or glass glue between each connection places, and put some glass glue in the screw holes previously when start fixing the holes.

<8>

picture after installation

MODEL: FS-8902



MAINTENANCE FUNDAMENTALS:

1. After using it each time, dry it off moisture on the product with a dry towel so that it is kept shiny and fine.
2. The daily cleaning of the product should be effected with ordinary detergents and soft cloth instead of detergents containing acetone or ammonia water; in case the room has stains left by sealing bands, rub them gently with gasoline-wet soft cloth.
3. Please avoid scratching the surface with hard or sharp objects. In case there are scratches on the surface (white plates), polish it gently by means of waterstone sand paper 1500# with some toothpaste to make it as shiny as a new one.
4. Gold-plated or chrome-plated parts need not be often polished (avoid contacting organic solvents)
5. At the end of each use, discharge all the water in the steam generator so as to prolong the service life of the generator.
6. In case the water flow is not smooth, remove the top cover and get rid of the impurities such as hair and remove it. Gold-plated or chrome-plated parts need not be often polished (avoid contacting organic solvents)
7. Check regularly the power line, switches and plugs to see if there is any damage done by rats, ants or insects.
8. Check regularly the water pipes to see if there are cracks, bending or stoppage so as to ensure normal service.
9. It is advisable to have the steam generator cleared of scales after repeated heat circulation.
10. For a longer service time, the intervals between successive switching must be over 30 seconds.
11. If the product has been left unused for a long time, it should be kept at a dry and well-ventilated place free of corrosive gases and should be cut off water and power supply.
12. When power wires are to be replacing, go the manufacturer or his sales gent for purchasing and replacing by his professionals.

Steam room installation instruction



Please read the instruction carefully before installing.